




## **Installation and Adjustment Procedures for U-Bolt Clevis**

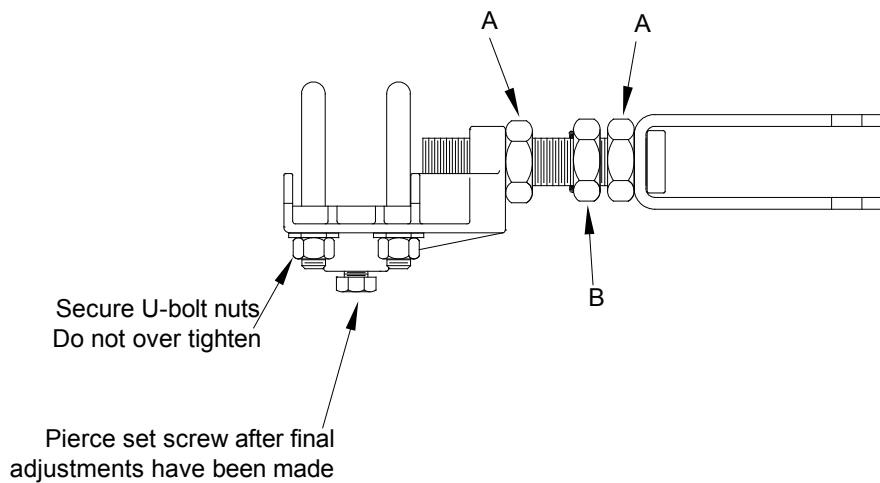

To adjust , loosen the locking nuts (A), and rotate the turning nut (B) to lengthen or shorten the offset pipe. Then tighten the locking nuts. Locking nuts must be tighten before operation.

Should further information be required, please contact Jeremy Moore at 276-688-2237